

Barometers

Advice for use

THE BAROMETER MUST BE ADJUSTED TO THE ALTITUDE OF ITS PLACE OF USE.

This is done by comparing it with a "master" barometer through the local weather station, or the recorded weather service by phone.

Don't forget to take into account the difference of altitude between the place of adjustment and the place of use of your barometer:

10m more=1.1 hPa less!

Make this adjustment immediately after consulting the "master" barometer.

To make the adjustment, using a flat blade screwdriver, turn the adjustment screw at the back side of the barometer.

Guarantee

conditions

This product is guaranteed against manufacturing defects for 2 years from the date of purchase.

This guarantee covers the free replacement of defective parts as well as necessary labour to achieve adequate operation of the device.

THE GUARANTEE DOES NOT COVER

1.- Damage resulting from abuse, knocks, falls or accidents or damage resulting from others causes not attributable to normal usage.

2.- Damage resulting from handling by any person than our own technical services.

3.- Transportation costs.

How to clean this

AUTONAUTIC products

Clean your instrument only using a soft cloth.

Do not use detergents or abrasive products which may cause damage to the anti-corrosion treatment



AUTONAUTIC INSTRUMENTAL

Italia, 1
08320 El Masnou
Barcelona (Spain)

T. + 34 93 540 99 49
F. + 34 93 540 99 51
info@autonauticinstrumental.com
www.autonauticinstrumental.com

Skype name : autonautic instrumental